

User Guide

01 Notes

- Please follow the user guide and your lock's actual function to operate.
- The SET button is located in the battery cover on the back plate.
- Each operation should be done within 8 seconds, or it will exit the setting.
- When error happens the touchpad shows cross icon X.
- After inputting number, please add # to confirm input.

Initial Status

The initial code is 123456, it goes invalid once an admin registered.

Reset

Open the battery cover and hold the DEL button. Buzzer short beeps 5 times then a long beep, release the DEL button, around 10 seconds another two long beeps. Reset done. After reset, all the information will be cleared.

02 Creation

New Admin

[SET] > [admin] > [SN] >    > [√]

- Press SET button
- Verify admin (it is 123456 at initial status)
- Input admin serial number 001-005 + #
- Scan RF ID card for 1 time or
Input password 2 times or
Enroll fingerprint 3 times

New User

[1#] > [admin] > [SN] >    > [√]

- Input 1# on the touch panel
- Verify admin
- Input user serial number 006-085 + #
- Scan RF ID card for 1 time or
Input password 2 times or
Enroll fingerprint 3 times

One Time Password (OTP)

[2#] > [admin] > [SN] >  > [√]

- Input 2# on the touch panel
- Verify admin
- Input OTP serial number 086-100 + #
- Input password 2 times

03 Deletion

Delete by serial number

[3#] > [admin] > [SN] > [√]

Note: it can't delete the current verified admin.

Delete all user

[4#] > [admin] > [√]

Delete all OTP

[5#] > [admin] > [√]

Clear the paired bluetooth

[7#] > [admin] > [√]

04 Always-Open Mode

[8#] > [admin] > [√]

Note:

- Number 5 keeps flash each 10 seconds at always-open mode.
- Input # or any unlock operation will cancel always-open mode.

05 Scrambling Code To Anti Peep

In case of any peep, you can add any digits before or after the effective password, it still can unlock the door. total digits is 20 at most.

06 Interior Lock Switch

Switch to the red label to allow only admins to unlock.

07 Alarm Warning

- Low battery alert
When battery is lower than 4.8V, buzzer will make alert while each unlocking. it still can keep 50 times unlocking until batteries dead, please replace the battery in time.
- Wrong password and fingerprint
Input wrong password or fingerprint 5 times, buzzer will make alert, keypad and sensor area will be locked for 3 minutes.
- Not setting admin alert
Not setting admin, unlock by password or fingerprint, buzzer make short beep 3 times.
- Beyond the user capacity.